


## RESTRINGING A TRAVERSE ROD

**1. Determine the length of new cord needed.** Measure the rod width and cord drop and add together. Double that number to get the cord length.

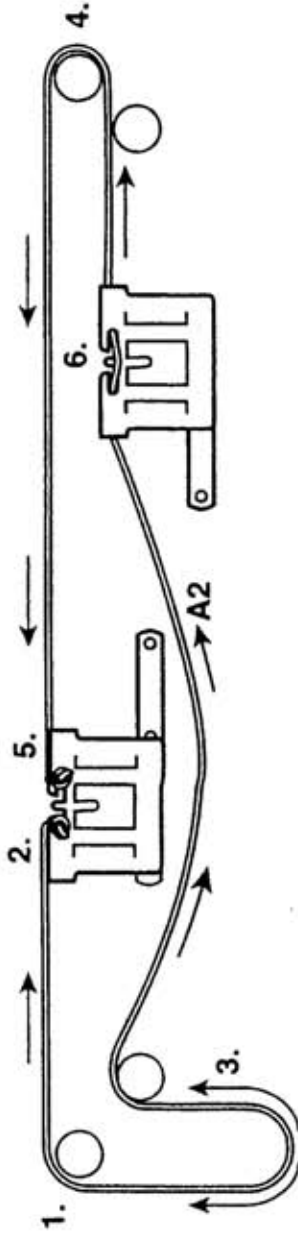

**2.** Feed cord end up through pulley housing at position 1 and lock off (tie off) on the overlap master carrier position 2.

**3.** Take other end of cord and feed up through and around end pulley 3. Pull across rod and around end pulley 4 back to overlap master carrier position 5. Determine final cord length. Tie off cord at position 5 and cut away excess cord.

**4.** Center master slides. Take the top cord and secure at position 6 on the underlap master carrier.

**5.** For a one way rod the underlap master carrier is not used. All other steps remain the same.